


ITEM NO: M7050

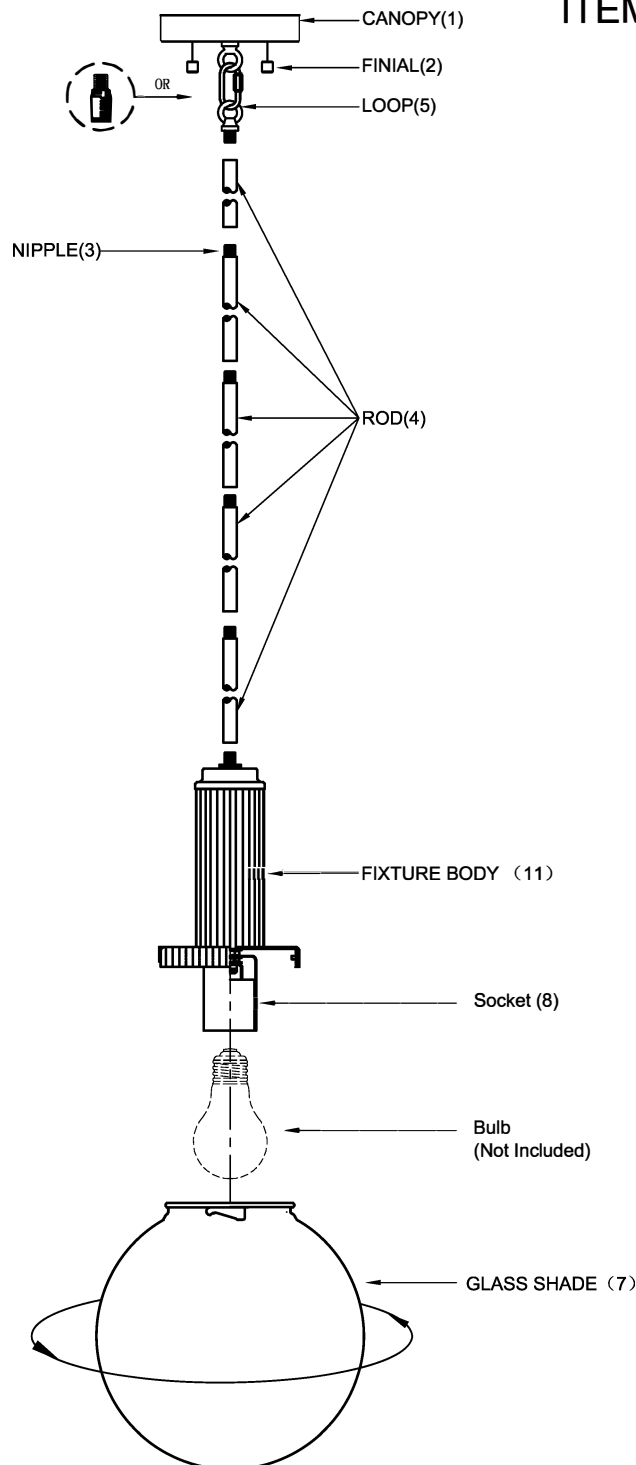

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. While threading wire through, assemble the rods (4) together using the nipples (3). Attach the bottom of the rods (4) to the fixture body (11).
4. Secure the loop (5) onto the top of the rods (4).
5. Install a proper bulb into socket (8).
6. Install glass shade (7) onto socket (8).
7. Use the quick link to connect the loop (5) to the canopy (1) and twist the locking mechanism to secure.
8. Refer to the additional installation instructions included with the product for wiring and installation.
9. Restore power to the installation point and retain this sheet for future reference.